

# AST

MONITORING YOUR JOURNEY

---

## REPLACEMENT PARTS CATALOG

# 2017

---

### **AST**

Progrés 32, 08191 Rubí,  
Barcelona, SPAIN.

**PHONE:** +34 93 586 20 73

**EMAIL:** [customerservice@ast.es](mailto:customerservice@ast.es)



## AST REPLACEMENT PARTS CATALOG

Since the 1960s, AST has provided robust, high-quality instrumentation products to leading off-road vehicle OEMs.

This replacement part catalog features original replacement parts for tractors and trucks manufactured by Landini, Massey Ferguson, Fendt, John Deere, Jungheinrich, Claas, Linde and Same.

### APPLICATION NOTES

- Correct application of AST products is the responsibility of the system designer.
- AST gauges should be matched with appropriate AST sender to assure system compatibility.
- For AST gauges, use in applications subject to excessive moisture is not recommended



---

# Index

---

04

01. LANDINI

16

05. JUNGHEINRICH

---

11

02. MASSEY FERGUSON

17

06. CLAAS

---

14

03. FENDT

20

07. LINDE

---

15

04. JOHN DEERE

21

08. SAME

---

## AMMETERS

OEM part number	AST part number
908430M1	105207
9084430M1	109907

## FLASHERS

OEM part number	AST part number
3533171M92	122195

## ANGULAR DRIVES

OEM part number	AST part number
E2758346	130207

## TURN SWITCHES

OEM part number	AST part number
881670M1	161021

## CLUSTERS

OEM part number	AST part number
3305408M93	190221
3542333M91	210349
4203484M91	213969
3533146M93	215309
3538068M93	215340
3683883M91	218164



## FUEL SENDERS

OEM part number	AST part number
1678517M2	250337
1678518M2	250338
1661794M92	250340
1825031M91	250352
3300380M91	250355
3308866M91	250357
3305908M91	250358
3301628M91	250359
1425614M91	250360
908600M1	250436
897389M91	250438
962384M3	250446
962386M3	250447
3530864M92	250813
3530230M92	250817
3532753M93	250830
3534871M91	250831
3535364M91	250832
3307091M92	250835
3530307M93	250836

## FUEL SENDERS

OEM part number	AST part number
3309386M93	250837
3539171M91	250840
3542603M92	250847
3543790M91	250851
3546974M91	250852
3551179M91	250870
3552216M92	250874
3556639M93	250878
3554216M91	250886
3554142M91	250887
3651263M91	250898
3303656M91	251302

## FUEL GAUGES

OEM part number	AST part number
260421	260421
3541211M91	260425
221542	260453
3684723M91	260454



## PRESSURE GAUGES

### OEM part number

### AST part number

355211

355211

3381907M1

355212

## LAMPHOLDERS WITH BULBS

### OEM part number

### AST part number

3541333M91

371401

3311408M91

371404

3653975M91

371412

## TEMPERATURE SENDERS

### OEM part number

### AST part number

1877731M92

405811

## TRACTOMETERS

### OEM part number

### AST part number

3305407M92

458503

3530293M92

458509

1674637M91

459916

1877718M92

459917

3381905M1

459924

3381904M1

459925

## MECHANICAL SWITCHES

OEM part number	AST part number
3652689M91	290138

## PRESSURE SWITCHES

OEM part number	AST part number
1877721M92	342120

## TEMPERATURE GAUGES

OEM part number	AST part number
3541212M91	410409
3653935M1	410475
3684722M91	410476
221613	410510
3680254M91	410511
Standard	415211
3381906M1	415212
1977719M92	419930

## IGNITION SWITCHES

OEM part number	AST part number
3547105M91	770008





## TACHOMETERS

OEM part number	AST part number
3669459M91	470409
S16829	470412
3541353M91	470429
3651552M91	470435
3541996M91	470439
3651550M91	470440
3653936M1	470442
3654642M91	470444
3658071M91	250360
3651712M91	250436
3654572M91	250438
3657049M91	250446
3657045M91	250447
3658068M91	250813
3657043M91	250817
3658071M91	250830
3666705M91	250831
221541	250832
3680253M91	250835

## FUEL FILTERS

OEM part number	AST part number
3651812M91	510102
898540M91	515001

## MAGNETIC SENSORS

OEM part number	AST part number
3583285M1	632001
3583286M1	632002
3550710M91	632003
3583287M2	632004
3712058M1	632005
4208334M1	632010
3647166M91	632040
3648189M92	632041

## RPM INSTRUMENTS

OEM part number	AST part number
3311406M91	680421
3540012M9	680422
3540011M91	680427
3541674M91	680430
3311406M92	680432

## FLASHERS

OEM part number	AST part number
4271990M1	122150
4271989M1	122151
3618239M1	122180
3778394M1	122182

## MAGNETIC SENSORS

OEM part number	AST part number
3582876M1	250829
3388604M92	250849
3712529M91A	250863
3713028M1	250864
3712952M01A	250869
3715286M3	250879
3777388M1	250881
3786032M2	250905
3787229M2	250913
3789697F1	250916
4273755F1	250917

## FUEL GAUGES

OEM part number	AST part number
1877717M92	269930



## MECHANICAL SWITCHES

### OEM part number

### AST part number

3780395M2

290132

3780580M1

290133

3780581M2

290134

## OIL PRESSURE SWITCHES

### OEM part number

### AST part number

1877721M92

342120

## TEMPERATURE SENDERS

### OEM part number

### AST part number

3618249M3

401420

3583331M1

401807

1877731M92

405811

## WATER TEMPERATURE GAUGES

### OEM part number

### AST part number

1877719M92

419930

## TRACTOMETERS

### OEM part number

### AST part number

1674638R92

458834

**TIMERS**

OEM part number	AST part number
3713403M3	480401
4271991M1	480407

**BUZZERS**

OEM part number	AST part number
3320197M1	480410/1

**TEMPERATURE SWITCHES**

OEM part number	AST part number
3595187M1	501411

**MAGNETIC SENSORS**

OEM part number	AST part number
3583285M1	632001
3583286M1	632002
3583287M1	632004
3712058M1	632005

## FUEL SENDERS

OEM part number	AST part number
G148200060011	251140
G149200060012	251141
G149200060021	251144
H716201061102	251148
C916201061152	251149
H718202060110	251154
H718202060120	251155
G117200060020	251156
G210202061020	251159

## FLASHERS

OEM part number	AST part number
AL202581	122152

## FUEL SENDERS

OEM part number	AST part number
AZ32189	250516
AL60502	251115
AL63554	251116
AL68201	251124
AL38313	251152
AL29847	251153

## HYDRAULIC PRESSURE SWITCHES

OEM part number	AST part number
AL67715	280422

## FUEL SENDERS

OEM part number	AST part number
50109642	250666
50109643	250667
50109644	250668
52037223	250674
52041092	250675

## TEMPERATURE SENDERS

OEM part number	AST part number
50108078	401203
50108075	401610
50108072	401852
51047756	403803

## LAMP HOLDERS WITH BULBS

OEM part number	AST part number
50123928	371402



## FLASHERS

OEM part number	AST part number
7700071886	122152
7700071887	122153
7700028142	122195

## FUEL SENDERS

OEM part number	AST part number
7700566466	250175
7700058531	250672
7700039224	250871
7700039225	250872
7700040651	250877
7700043866	250880
7700054416	250896
7700054417	250897
7700057844	250901
7700052413	250902
7700056726	250904
7700066378	250908
7700064514	250909
7700064464	250911



## FUEL SENDERS

OEM part number	AST part number
7700066568	250912
7700068026	250914
7700019512	251009
7700019511	251010
7700020170	251011
7700033479	251014

## FUEL FILTERS

OEM part number	AST part number
7700055239	510102

## MECHANICAL SWITCHES

OEM part number	AST part number
7700050859	290135
7700050861	290136
7700050980	290137
7700060161	290143
10409841	290144

## MAGNETIC SENSORS

OEM part number	AST part number
7700054283	632002
7700057960	632006

## TEMPERATURE SENDERS

OEM part number	AST part number
7700058935	401423
7700054355	405020
7700054356	405021
7700065083	405022

## TACHOMETERS

OEM part number	AST part number
7700031173	478010
7700031174	478011
7700031170	478012
7700031171	478013
7700033517	478014
7700058589	478028
7700058590	478029

## TEMPERATURE SWITCHES

OEM part number	AST part number
7701033384	501001
7700855325	501416
7700737576	501826

## FLASHERS

OEM part number	AST part number
9732502	122174

## CLUSTERS

OEM part number	AST part number
9460765	191018
7917292523	191019
7917292553	191038
7917292580	191039

## FUEL SWITCHES

OEM part number	AST part number
9731238	362261
9731239	362262

## TEMPERATURE SWITCHES

OEM part number	AST part number
9451006	501409

## FLASHERS

OEM part number	AST part number
286390050	122177
Standard	122195

## ANGULAR DRIVES

OEM part number	AST part number
270496700	130107

## FUEL GAUGES

OEM part number	AST part number
813050	265001
270594100	265255

## PRESSURE GAUGES

OEM part number	AST part number
813070	355002
270190700/20	355235

## LAMP HOLDERS WITH BULBS

OEM part number	AST part number
379601	379601

## HOURMETERS

OEM part number	AST part number
Standard	474205



## TEMPERATURE SENDERS

### OEM part number

### AST part number

270999300

401203

270996400/10

401421

270998300

401422

270991000/10

402202

## TEMPERATURE GAUGES

### OEM part number

### AST part number

813090

415001

1061973

415085

000917350/10

415086

270690900

415236

## VOLTMETERS

### OEM part number

### AST part number

813060

445001

270992800

445207

## TRACTOMETERS

### OEM part number

### AST part number

270496600

451039

270496800

451040

270496900

451041

## TRACTOMETERS

OEM part number	AST part number
270497500	451042
270497100/10	451044
270497300/10	451045
270497600	451052
270497900	451055
270498000/10	451056
270497800/20	451058
270497400	451059
270496300	451060
2704989000	471020
270499000	471021
27049840.0/10	474003
270498800	474006
270499100/11	474007
270499200/10	474008
270499840/10	474009
270499850/10	474010
905070/40	474051
905307/40	474052
270498200/20	474053
270498300/20	474054

# AST

MONITORING YOUR JOURNEY

© 2017 Maxima Technologies, S.L.

C/Progrés N° 32,  
08191 Rubí (Barcelona) Spain

Phone: 34.935862073  
[www.maximatecc.com](http://www.maximatecc.com)